MORIMOTO

BRIGHT IS ONLY THE BEGINNING

INSTALL GUIDE

DITCH LIGHT BRACKETS: DOUBLE POD ADAPTERS

BAF056

WHAT'S INCLUDED

2X DOUBLE POD ADAPTERS

2X M10X1.5 CARRIAGE BOLTS

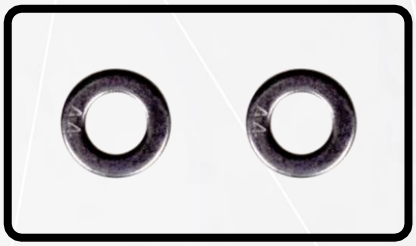

2X WASHERS

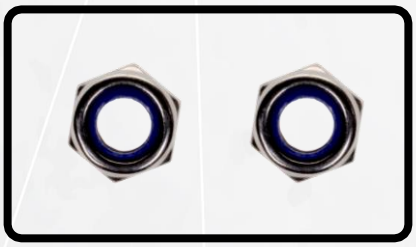

2X NYLON INSERT LOCK NUTS

DESIGNED + ENGINEERED + PERFECTED IN ATLANTA, GA

REQUIRED TOOLS

- 17MM WRENCH

WARNING: IT IS THE INSTALLERS RESPONSIBILITY TO CONFIRM COMPLIANCE WITH STATE AND LOCAL LAWS. BY READING THIS DOCUMENT, YOU AGREE IT IS ONLY TO BE USED AS AN EDUCATIONAL GUIDE. MORIMOTO LIGHTING NOR ITS DEALERS MAKE GUARANTEES ON ANY FINISHED RESULTS, NOR ARE THEY TO BE HELD RESPONSIBLE FOR ANY DAMAGE, MISUSE, OR PERSONAL INJURIES. IF YOU ARE UNABLE TO CLEARLY UNDERSTAND AND ADAPT THE INFORMATION BELOW, PROFESSIONAL INSTALLATION IS RECOMMENDED.

DOUBLE POD ADAPTER INSTALLATION

1. SECURE YOUR DOUBLE POD ADAPTER TO YOUR DITCH LIGHT BRACKET USING THE PROVIDED CARRIAGE BOLT, WASHER, AND LOCK NUT. THE ADAPTER HAS THREE DIFFERENT SQUARE CUTOUTS FOR THE CARRIAGE BOLT, SO YOU CAN EITHER HAVE THE ADAPTER CENTERED ON YOUR BRACKET, OR OFFSET TO EITHER SIDE. TIGHTEN DOWN THE LOCK NUT USING A 17MM WRENCH

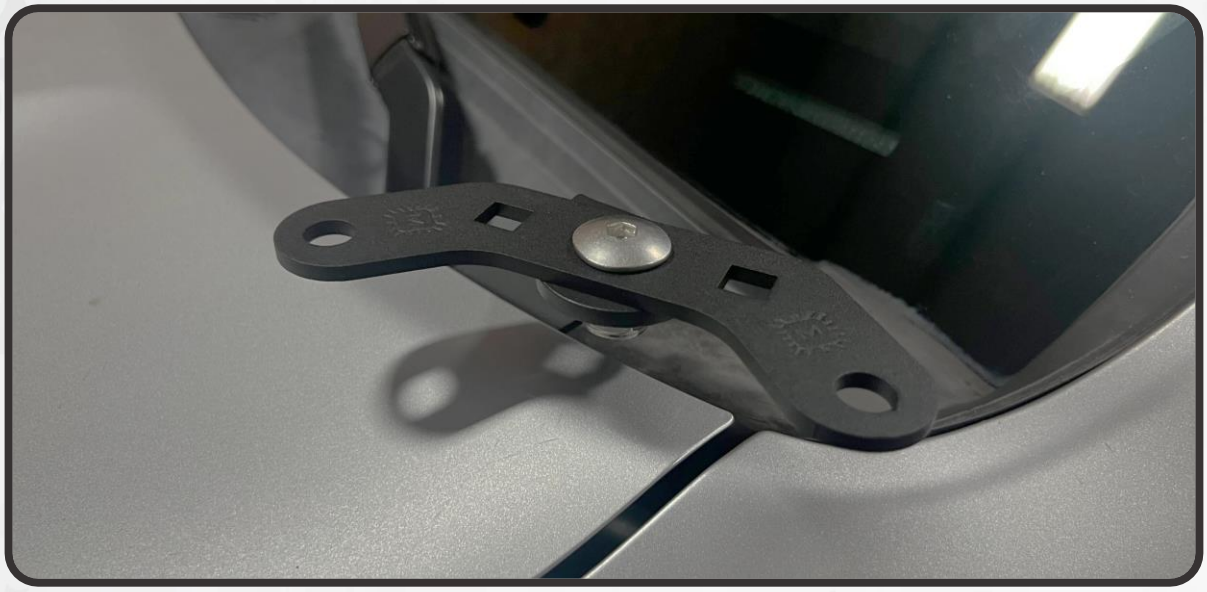

2. INSTALL THE POD LIGHTS OF YOUR CHOICE ONTO THE TWO MOUNTING LOCATIONS AT EITHER END OF THE ADAPTER

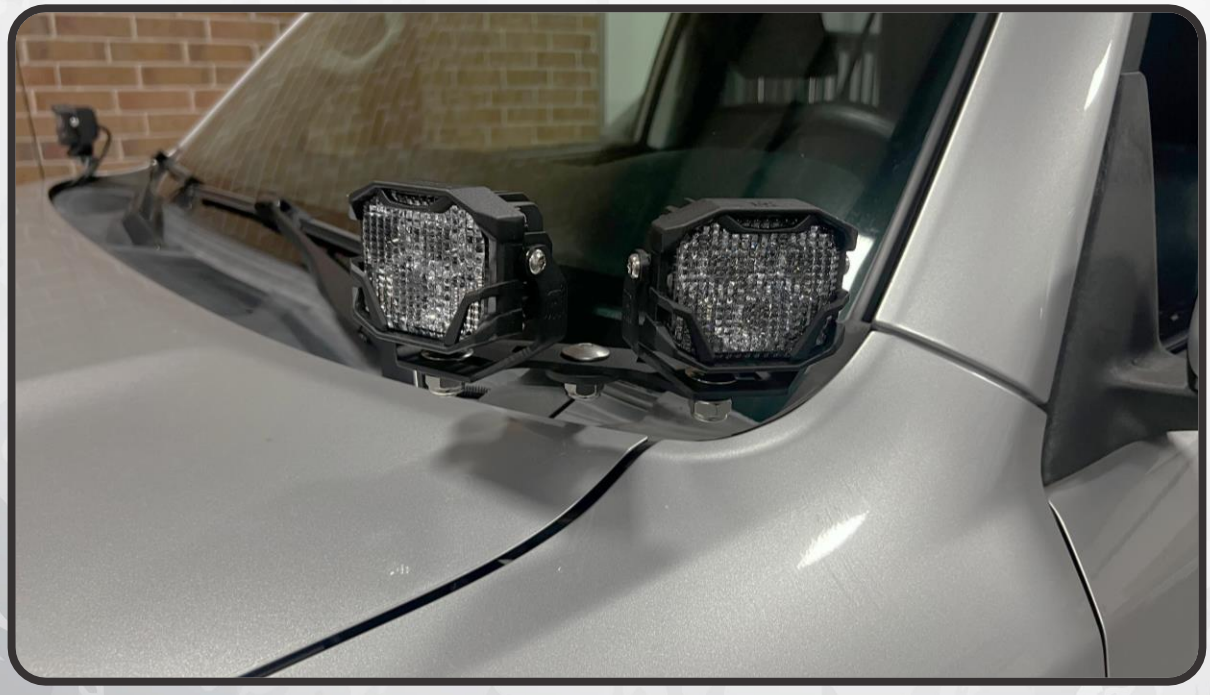

DOUBLE POD ADAPTER INSTALLATION

3. WIRE UP YOUR TWO POD LIGHTS. THEY CAN EITHER BE RUN OFF OF TWO SEPARATE RELAY HARNESSES, OR OFF OF ONE RELAY HARNESS WITH AN OUTPUT SPLITTER (SHOWN BELOW)

4. REPEAT STEPS 1-3 ON THE OPPOSITE SIDE OF YOUR VEHICLE