



BRIGHT IS ONLY THE BEGINNING

INSTALL GUIDE

X3B LED THIRD BRAKE LIGHT: GM COLORADO/CANYON (15-24)

X3B55

WHAT'S INCLUDED



1X 3RD BRAKE
LIGHT ASSEMBLY



1X ADAPTER
HARNESS



REQUIRED TOOLS

- T20 TORX BIT
- YOUR PREFERRED DETAIL SPRAY OR PAINT CLEANER

WARNING: IT IS THE INSTALLERS RESPONSIBILITY TO CONFIRM COMPLIANCE WITH STATE AND LOCAL LAWS. BY READING THIS DOCUMENT, YOU AGREE IT IS ONLY TO BE USED AS AN EDUCATIONAL GUIDE. MORIMOTO LIGHTING NOR ITS DEALERS MAKE GUARANTEES ON ANY FINISHED RESULTS, NOR ARE THEY TO BE HELD RESPONSIBLE FOR ANY DAMAGE, MISUSE, OR PERSONAL INJURIES. IF YOU ARE UNABLE TO CLEARLY UNDERSTAND AND ADAPT THE INFORMATION BELOW, PROFESSIONAL INSTALLATION IS RECOMMENDED.




FACTORY LIGHT REMOVAL

1. REMOVE THE TWO T20 TORX HEAD SCREWS SECURING THE FACTORY 3RD BRAKE LIGHT TO THE VEHICLE



2. PULL THE BRAKE LIGHT ASSEMBLY AWAY FROM THE VEHICLE
3. DEPRESS THE TAB ON THE BRAKE LIGHT CONNECTOR AND PULL AWAY FROM THE ASSEMBLY TO DISCONNECT THE PLUG

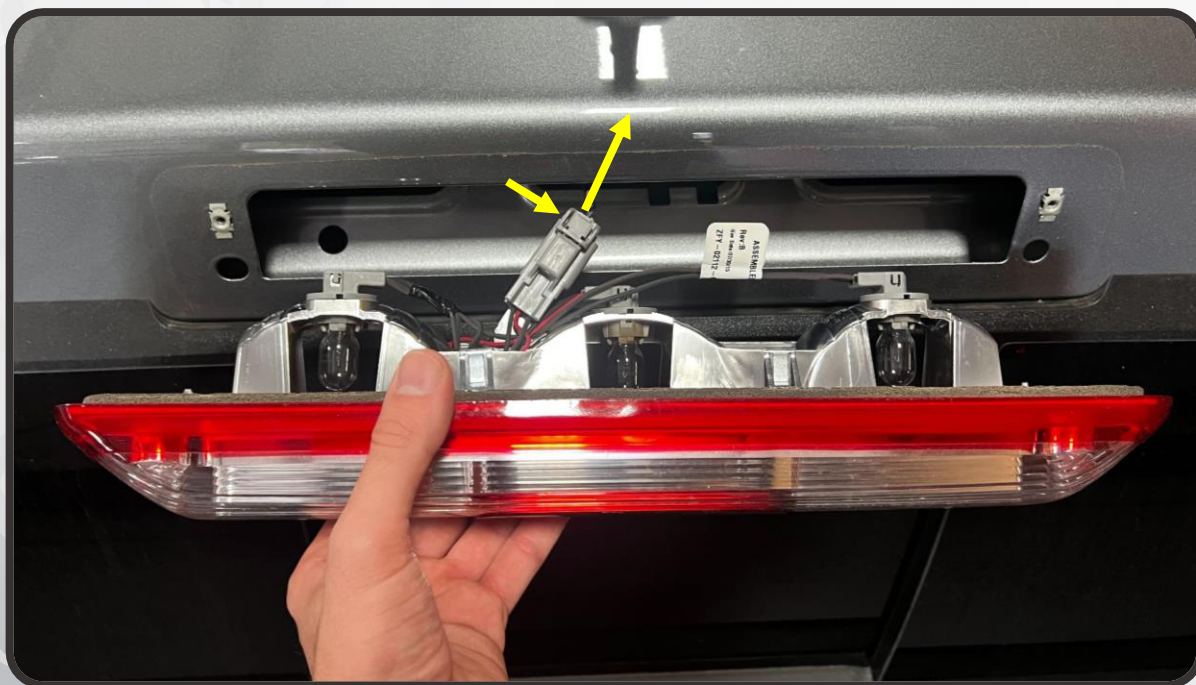

X3B INSTALLATION

4. WITH THE 3RD BRAKE LIGHT ASSEMBLY REMOVED FROM THE VEHICLE, TAKE THIS TIME TO THOROUGHLY CLEAN UNDERNEATH THE ASSEMBLY. MAKE SURE THE AREA AROUND THE HOUSING IS FREE OF DIRT/DEBRIS SO THAT THE NEW ASSEMBLY CAN PROPERLY SEAL AGAINST THE VEHICLE



5. CONNECT THE INCLUDED ADAPTER HARNESS TO THE VEHICLE'S FACTORY 3RD BRAKE LIGHT CONNECTOR



X3B INSTALLATION

IF YOU WILL BE INSTALLING THE MORIMOTO X3B RAPID-FLASH MODULE (SOLD SEPARATELY), FOLLOW STEPS 6 AND 7 BELOW. IF YOU ARE NOT INSTALLING THE RAPID-FLASH MODULE, SKIP AHEAD TO PAGE 5 (STEP 8)

6. CONNECT THE RAPID-FLASH MODULE TO THE ADAPTER HARNESS



7. FIND A SUITABLE LOCATION IN THE BRAKE LIGHT CAVITY TO MOUNT THE RAPID-FLASH MODULE, WHERE IT IS NOT IN THE WAY OF THE BRAKE LIGHT HOUSING, BUT IS CLOSE ENOUGH FOR THE MODULE TO PLUG INTO THE BACK OF THE 3RD BRAKE LIGHT. MAKE SURE THIS AREA HAS BEEN THOROUGHLY CLEANED. REMOVE THE BACKING ON THE ADHESIVE ON THE BACK OF THE MODULE AND SECURE IT TO THE SHEET METAL IN THE CAVITY



X3B INSTALLATION

8. LIFT THE NEW BRAKE LIGHT ASSEMBLY UP TO THE VEHICLE AND CONNECT THE ADAPTER HARNESS (OR RAPID-FLASH MODULE IF INSTALLED) TO THE CONNECTOR ON THE BACK OF THE HOUSING



9. FIT THE NEW BRAKE LIGHT ASSEMBLY INTO THE LIGHT CAVITY AND SECURE IT TO THE VEHICLE USING THE TWO FACTORY T20 TORX HEAD SCREWS. TIGHTEN UNTIL HAND TIGHT. DO NOT USE POWER TOOLS, DO NOT OVERTIGHTEN



10. GET IN THE VEHICLE AND CONFIRM THAT ALL FUNCTIONS ARE WORKING PROPERLY

- ENJOY YOUR NEW MORIMOTO X3B BRAKE LIGHT! -

