MORIMOTO

BRIGHT IS ONLY THE BEGINNING

# INSTALL GUIDE

## 4BANGER FLUSH MOUNTING KIT (FIXED)

BAF155

DESIGNED + ENGINEERED + PERFECTED IN ATLANTA, GA

WARNING: IT IS THE INSTALLERS RESPONSIBILITY TO CONFIRM COMPLIANCE WITH STATE AND LOCAL LAWS. BY READING THIS DOCUMENT, YOU AGREE IT IS ONLY TO BE USED AS AN EDUCATIONAL GUIDE. MORIMOTO LIGHTING NOR ITS DEALERS MAKE GUARANTEES ON ANY FINISHED RESULTS, NOR ARE THEY TO BE HELD RESPONSIBLE FOR ANY DAMAGE, MISUSE, OR PERSONAL INJURIES. IF YOU ARE UNABLE TO CLEARLY UNDERSTAND AND ADAPT THE INFORMATION BELOW, PROFESSIONAL INSTALLATION IS RECOMMENDED.

# 4BANGER FLUSH MOUNTING KIT (FIXED)

TABLE OF CONTENTS PAGE

FACE PLATE INSTALLATION ---------- 3

FLUSH MOUNT INSTALLATION ---------- 4

## WHAT'S INCLUDED

2X FLUSH MOUNT 4BANGER FACE PLATES

4X REAR MOUNTING BRACKETS

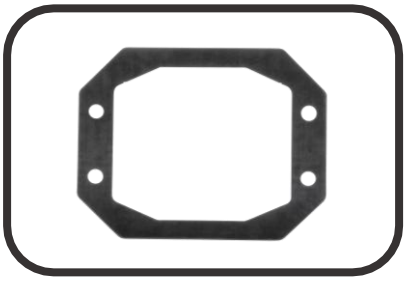

2X RUBBER FACE PLATE GASKETS

8X T25 FLAT HEAD SCREWS

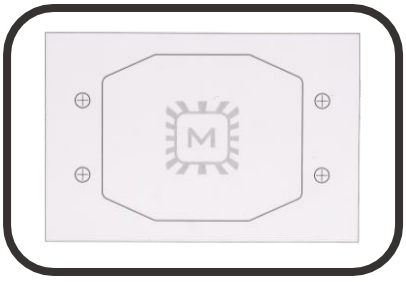

2X FLUSH MOUNT TEMPLATES

## REQUIRED TOOLS

- CENTER PUNCH
- DRILL
- 1/4" DRILL BIT
- CUTOFF WHEEL
- SANDPAPER/METAL FILE
- T10 TORX DRIVER
- T25 TORX DRIVER
- SAFETY GLASSES, GLOVES, AND EAR PROTECTION ARE STRONGLY RECOMMENDED

# FACE PLATE INSTALLATION

1. BEGIN BY MOUNTING THE FLUSH MOUNT FACEPLATE ONTO THE 4BANGER POD. TO DO THIS, REMOVE THE FOUR T10 TORX SCREWS ON THE BACK OF THE POD

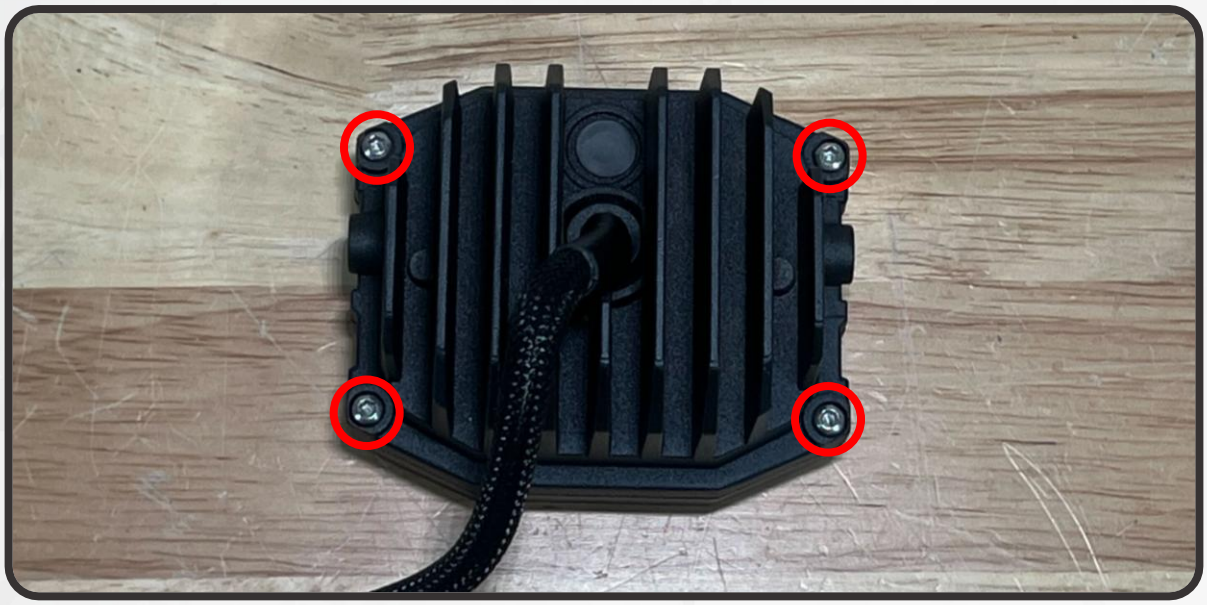

2. WITH THE SCREWS REMOVED, REMOVE THE ORIGINAL FACEPLATE AND FIT THE FLUSH MOUNT FACEPLATE IN ITS PLACE. MAKE SURE TO ORIENT THE FLUSH MOUNT PLATE RIGHT-SIDE UP, AND THAT THE LENS/LENS SEAL REMAIN IN PLACE

3. FLIP THE POD BACK OVER ONTO ITS FACE. REINSTALL THE FOUR T10 TORX SCREWS TO SECURE THE FLUSH MOUNT FACEPLATE AND TIGHTEN THEM DOWN IN A STAR PATTERN UNTIL HAND TIGHT. HAND TIGHTEN THEM UNTIL SNUG. DO NOT OVERTIGHTEN

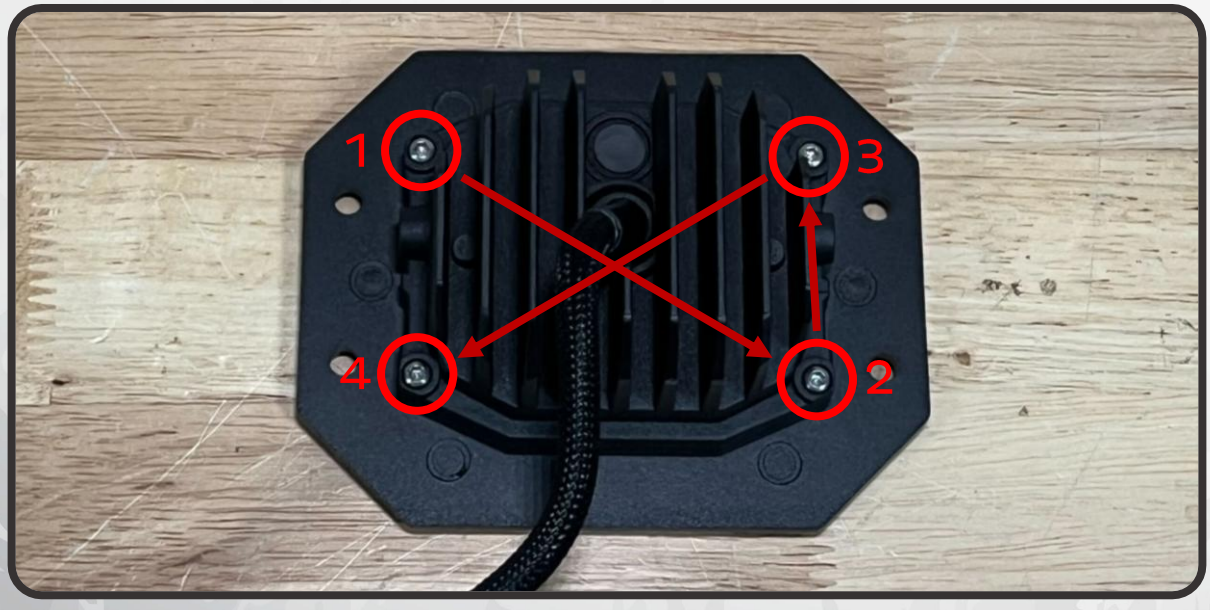

# FLUSH MOUNT INSTALLATION

4. SECURE YOUR INCLUDED FLUSH MOUNT TEMPLATE TO YOUR MOUNTING SURFACE. A PRINTABLE COPY OF THIS TEMPLATE WITH ALL DIMENSIONS IS ALSO INCLUDED ON THE PRODUCT LISTING IF NEEDED.

5. USING A CENTER PUNCH, MARK THE CENTERS OF EACH OF THE FOUR MOUNTING HOLES, AS WELL AS THE CENTER OF THE RADIUS OF EACH OF THE EIGHT CORNERS

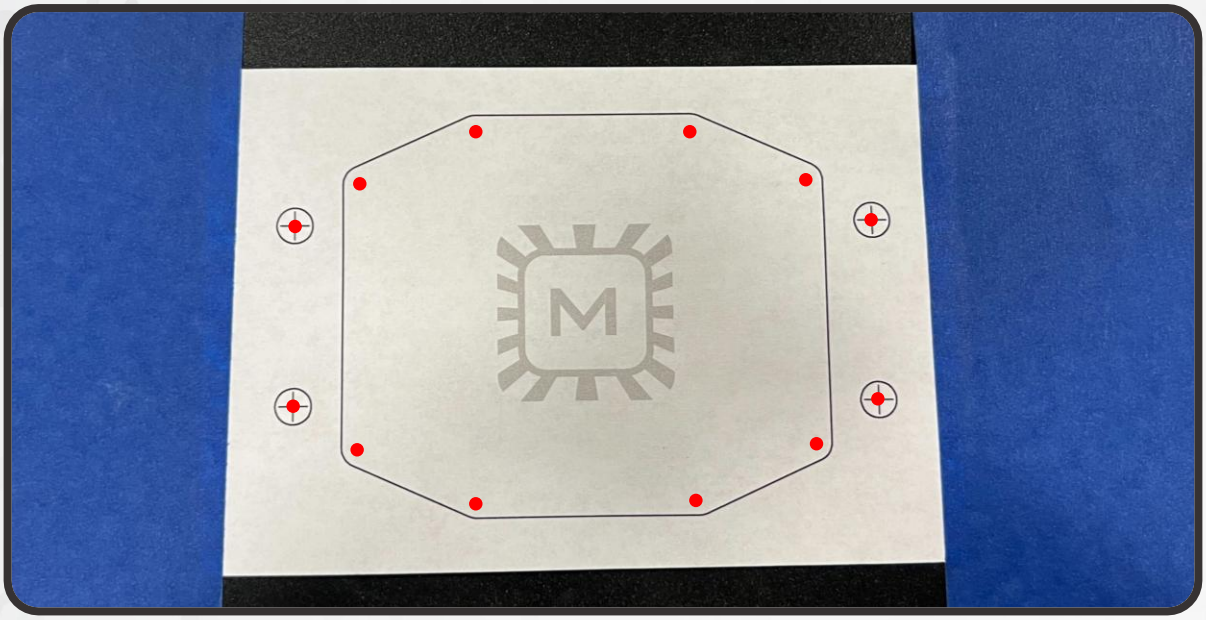

6. REMOVE THE TEMPLATE FROM YOUR MOUNTING SURFACE. DRILL OUT THE EIGHT INNER CENTER PUNCH MARKS AND THE FOUR OUTER CENTER PUNCH MARKS WITH A 1/4" DRILL BIT

# FLUSH MOUNT INSTALLATION

7. USING A SMALL CUTOFF WHEEL, “CONNECT THE DOTS”, BY MAKING A CUT BETWEEN THE OUTER EDGES OF THE INNER HOLES YOU DRILLED, AS SHOWN BELOW, TO CUT OUT THE HOLE FOR YOUR 4BANGER

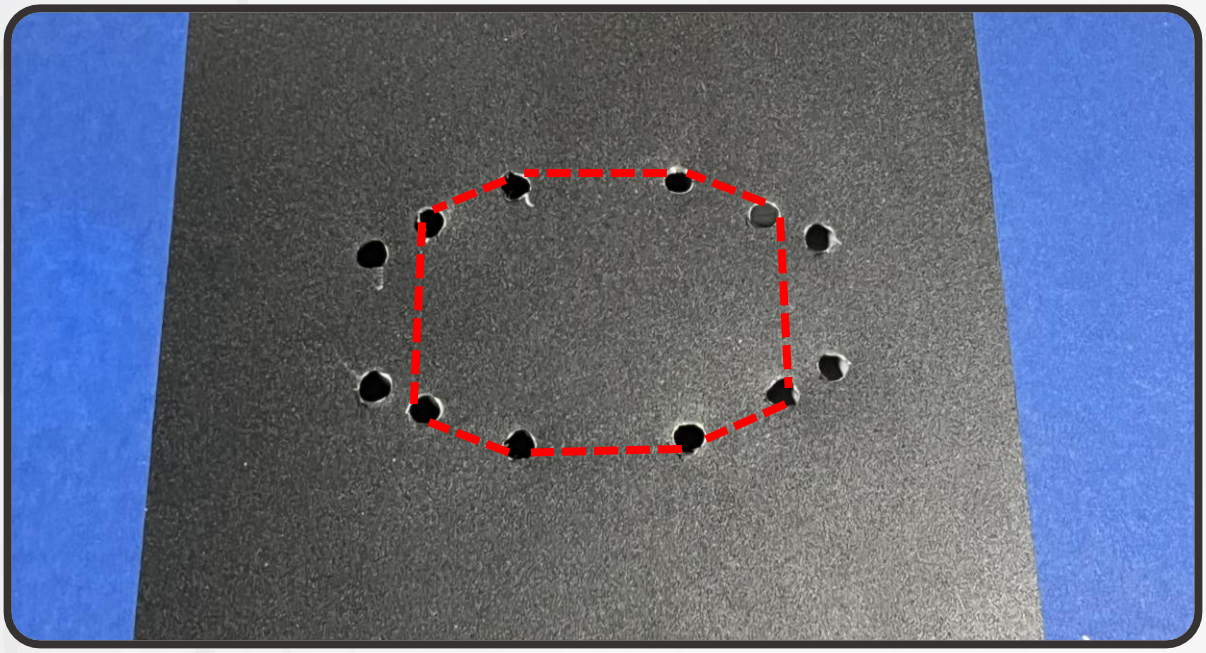

8. ONCE YOU’VE MADE YOUR CUTS, FILE/SAND DOWN ANY ROUGH EDGES. YOUR MOUNTING SURFACE SHOULD LOOK LIKE THE PICTURE BELOW, AND IS NOW READY FOR THE POD TO BE MOUNTED

# FLUSH MOUNT INSTALLATION

9. TEST FIT YOUR 4BANGER IN THE CUTOUT YOU'VE MADE AND CONFIRM THAT THE POD FITS AND THE MOUNTING HOLES ON THE FACEPLATE AND MOUNTING SURFACE ARE ALIGNED. DO ANY ADDITIONAL TRIMMING NEEDED

10. WITH THE 4BANGER HELD AGAINST YOUR MOUNTING SURFACE, PLACE ONE OF YOUR REAR MOUNTING BACKETS ON THE BACK OF YOUR MOUNTING SURFACE AND ALIGN IT WITH THE TWO HOLES ON ONE SIDE OF THE 4BANGER. THE REAR MOUNTING BRACKETS CAN BE HELD IN PLACE WITH A 12MM WRENCH IF NEEDED. HAND THREAD TWO OF YOUR T25 FLAT HEAD SCREWS INTO THE HOLES. REPEAT THIS ON THE OTHER SIDE OF THE 4BANGER. ONCE ALL FOUR SCREWS ARE THREADED IN, TIGHTEN THEM DOWN IN A START PATTERN UNTIL HAND TIGHT

# FLUSH MOUNT INSTALLATION

11. REPEAT ALL STEPS WITH YOUR OTHER 4BANGER
12. WITH YOUR 4BANGERS MOUNTED, RUN YOUR WIRING AND CONNECT IT TO THE PODS

# 4BANGER FLUSH MOUNTING KIT (FIXED)

**- ENJOY YOUR NEW MORIMOTO 4BANGERS! -**