




THE AUTOMOTIVE LIGHTING BENCHMARK

# INSTALL GUIDE

## 4BANGER REPLACEMENT LENSES



## PACKAGE CONTENTS

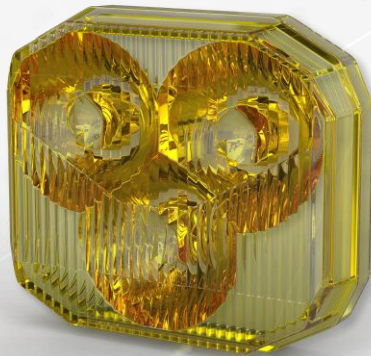

## 1X REPLACEMENT LENS

## REQUIRED TOOLS


- T10 TORX BIT
- RATCHET
- BLUE THREAD LOCKER (RECOMMENDED)

WARNING: IT IS THE INSTALLERS RESPONSIBILITY TO CONFIRM COMPLIANCE WITH STATE AND LOCAL LAWS. BY READING THIS DOCUMENT, YOU AGREE IT IS ONLY TO BE USED AS AN EDUCATIONAL GUIDE. MORIMOTO LIGHTING NOR ITS DEALERS MAKE GUARANTEES ON ANY FINISHED RESULTS, NOR ARE THEY TO BE HELD RESPONSIBLE FOR ANY DAMAGE, MISUSE, OR PERSONAL INJURIES. IF YOU ARE UNABLE TO CLEARLY UNDERSTAND AND ADAPT THE INFORMATION BELOW, PROFESSIONAL INSTALLATION IS RECOMMENDED.



## DISASSEMBLY

1. START WITH YOUR 4BANGER FACE DOWN. WE RECOMMEND USING A WORK MAT TO PREVENT SCRATCHING YOUR LENSES
2. USING A T10, REMOVE THE 4 SCREWS SECURING THE LENS HOLDER TO THE HOUSING

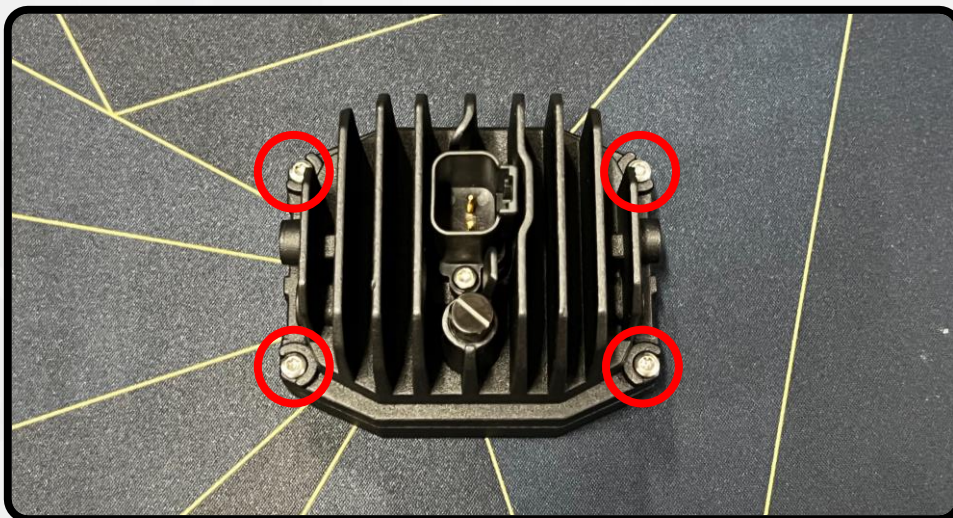


3. FLIP THE POD OVER AND REMOVE THE LENS HOLDER AND LENS. MAKE SURE THAT THE RUBBER LENS GASKET REMAINS IN THE LENS CHANNEL (GREEN), AND IS LAYING FLAT





# INSTALLATION

4. PLACE THE NEW LENS ON THE POD. MAKE SURE THAT THE LENS IS ORIENTED SO THAT THE OPTICS (RED) MATCH UP TO THE LED CHIPS (GREEN)

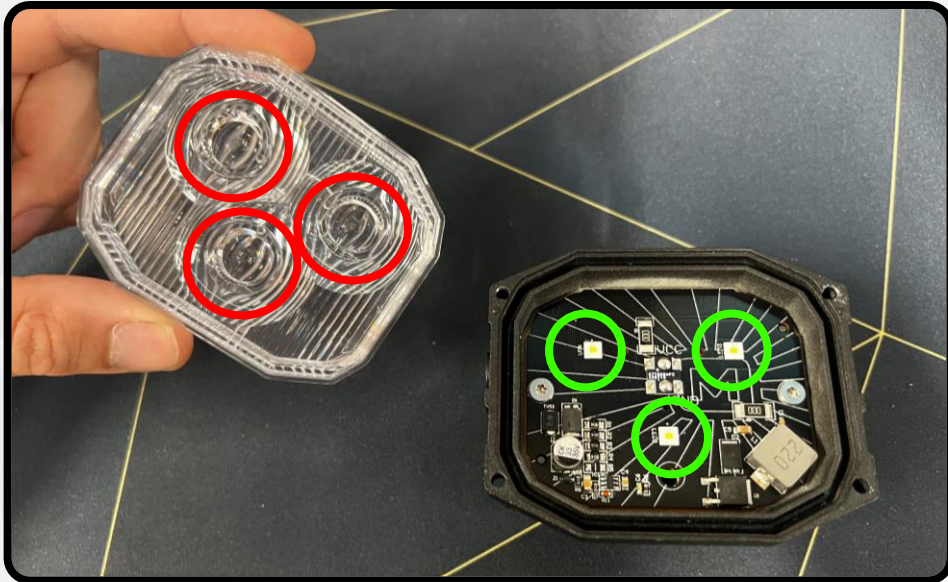


5. PLACE THE LENS HOLDER OVERTOP OF THE NEW LENS. MATCH THE ALIGNMENT LOCATORS ON THE HOLDER TO THE HOLES ON THE HOUSING. THE DESIGN ON THE SIDE OF THE HOLDER AND HOUSING SHOULD MATCH UP AS WELL



## REASSEMBLY

6. FLIP THE POD BACK OVER ONTO ITS FACE. WE RECOMMEND TAKING THIS TIME TO ADD A DROP OF THREAD LOCKER TO THE THREADS OF EACH OF THE SCREWS. REINSTALL THE 4 SCREWS INTO THE POD AND TIGHTEN THEM DOWN IN A STAR PATTERN UNTIL HAND TIGHT

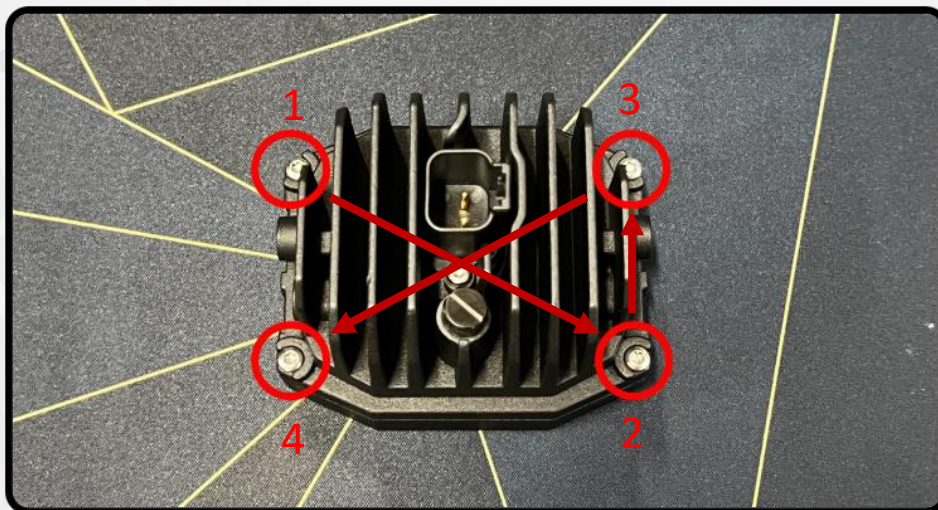

- ENJOY YOUR NEW 4BANGER LENSES! -

