




THE AUTOMOTIVE LIGHTING BENCHMARK

14-21 TOYOTA TUNDRA X3B THIRD BRAKE LIGHT INSTALLATION GUIDE

WARNING: By reading this document, you agree it is only to be used as an educational guide. Morimoto Lighting nor its dealers make guarantees on any finished results, nor are they to be held responsible for any damage, misuse, or personal injuries. If you are unable to clearly understand and adapt the information below, professional installation is recommended.


PACKAGE CONTENTS

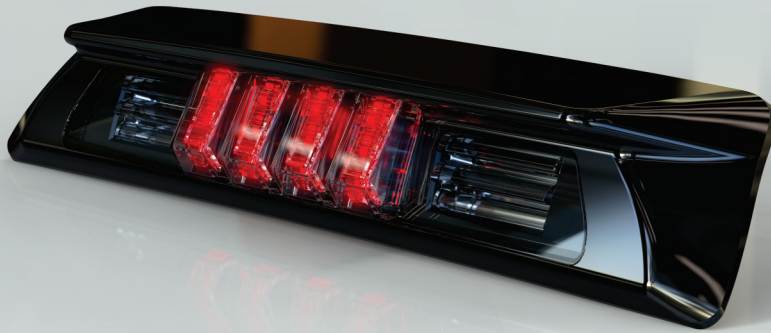

1X THIRD BRAKE LIGHT



2X MOUNTING STUDS

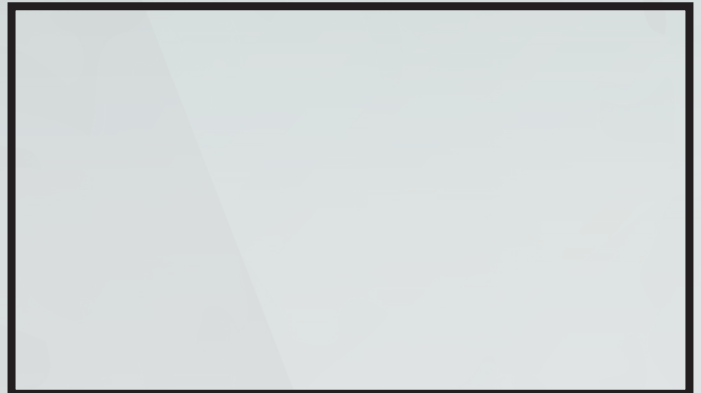

1X FOAM GASKET

TOOLS REQUIRED

10MM SOCKET WITH EXTENSIONS
THIN TRIM PRY TOOL



OPTIONAL X3B01 RAPID FLASH MODULE

INSTALLATION PROCESS

1. Slightly pull back the headliner inside the cab nearest the rear glass (Image 1). Using a trim removal tool, release the two push clips holding the headliner to the roof (Image 2).



2. Remove the two 10mm nuts holding the third brake light to the cab.



3. Using the trim removal tool, carefully wedge the tool between the brake light and the cab, loosening the foam seal from the cab in the process (Image 1). Once the foam seal has been fully broken, remove the brake light from the truck (Image 2).



4. Unplug the factory connector and remove the third brake light from the truck. Scrape off excess foam from the truck using a plastic razor blade.



5. For steps on installing the Rapid Flash Module (SKU X3B01), see Page 4.

6. Fit the two mounting studs to the X3B and tighten with a 10mm socket. Do not overtighten!



6. Install the foam gasket on the back of the assembly.
7. Installation is reverse of removal.
8. Turn on the truck and go through all modes to ensure proper functionality.

-END-

RAPID FLASH MODULE INSTALLATION

1. Unclip the wiring harness from the back of the X3B Brake Light (Image 1)
2. Plug the female connector into the X3B Brake Light (Image 2)
3. Plug X3B Brake Light harness into male connector of the flasher module.
4. Peel back wrapper from double-sided tape on the flasher module. Stick and secure module onto either the back of the X3B Brake Light or the inside of the light cavity.
5. Turn on the truck and go through all modes to ensure proper functionality.
6. Enjoy your new X3B Brake Light with Rapid Flash!

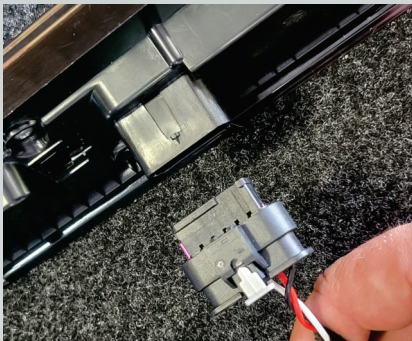


Image 1

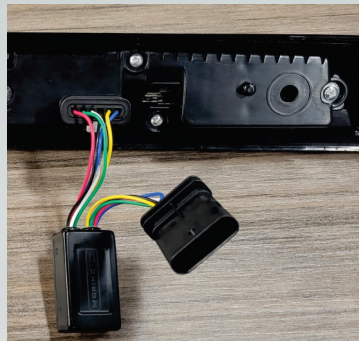


Image 2



Image 3

-END-